

Main Features of this Decoder

Back EMF Load Compensation for superior slow speed control even with heavy loads.

- **Quiet Drive** creates SUPER QUIET engine performance.
- **Autodetect** for realistic throttle response when using DC power.
- **Dimmed Brightness** of bulbs or LEDs is adjustable.
- **Variable Momentum** lets you make custom acceleration curves.
- **Mars, Gyra, and Rotary Beacon** are adjustable.
- **Decoder Lock** for programming same address decoders independently.
- **Function Remapping:** 13 buttons for most lights, 7 buttons for operations.

Other Features of This Decoder: This decoder has too many features that could be listed on this page. For the complete list of available features, print out the "Additional Programing Guide" that can be found in the literature section of our website (www.tcsdcc.com). Some of the features include: Function Remapping, 3 Point Acceleration/Deceleration Curves, Button Control of the Motor, Loadable Speed Tables, Various lighting effects, decoder lock and many more.


WARRANTY PROCEDURE: All decoders are covered by a one year goof proof, no questions asked warranty. **Please return in a small box.**

1. You MUST register the failed decoder on our website at www.tcsdcc.com.
If you do not have access to a computer you MUST call to register your warranty at: (267) 733-3408
2. Print out a copy of the Warranty Registration and include it in the box with the decoder(s).
3. Return decoder(s) directly to us using the address below.

Compatible with NMRA DCC standards.

Made by TCS in the USA.

Train Control Systems
P.O. Box 341
845 Blooming Glen Rd.
Blooming Glen, PA 18911

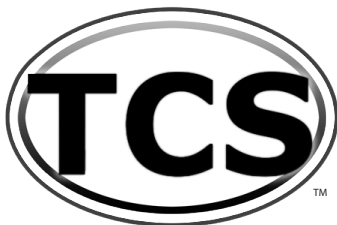

Phone **215-453-9145**
Fax **215-257-0735**
Email tcs@tcsdcc.com
Web www.tcsdcc.com



Our Famous GOOF PROOF NO
Questions Asked Warranty



Scale	Functions	Function Rating	Continuous/Peak
N	3	80 mA	1.0 /2.0 Amp

Dimensions: 1.26"x.43"x.06" or 32.02mm x 10.97mm x 1.65 mm

This full featured BEMF decoder is designed specifically to fit the Kato N-Scale NW2 locomotive. Included is our auto-adjusting BEMF for outstanding slow speed performance and hassle free set up. Also includes Quiet Drive for super quiet engine performance.

Installation Tips

Note of caution: Motor tabs must be removed AND reused for this installation.


***Care must be taken in the removal of the motor tabs.

1. Carefully remove the motor tabs using tweezers; Save for later. Log on to www.tcsdcc.com for more detailed information in the removal of the motor tabs.
2. Next remove the original lighting board.
3. Install the decoder in place of the original lighting board.
4. Now reinsert the motor tabs, connecting the motor brushes to the decoder. Please reference www.tcsdcc.com for more detailed instructions.

Note: If hooking up the third light output use an LED only and please refer to our website www.tcsdcc.com for pictures and information as there is more information needed then there is room to document here.

INSTALLATION

For detailed installation information visit our website where we maintain a constantly growing database of a wide range of locomotives and decoders.

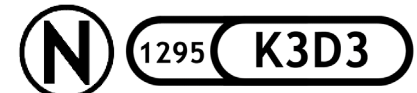

BASIC CONFIGURATION

CV 29 Configuration			
A	0	1	Reverse the direction the engine runs.
B	2	2	Use 28/128 speed step mode.
C	4	4	Enable analog (DC) operation.
D	0	16	Make the Loadable Speed Tables active.
E	0	32	Make the decoder address 128 or higher.
CV 29	6		← Program the sum of the values you choose into CV 29
2 Digit Address			
		Use if the address is 127 or less.	
CV 1	3		← Record your choice here.
4 Digit Address			
		Make sure 4-digit Addressing is enabled in CV29	
CV 17	0		← Record your four digit address here
CV 18	0		Your command station will assign the values of CV 17 and CV18
Consist Address			
		Add 128 to reverse the loco when in consist.	
CV 19	0		Use a 2 digit address when in a consist (Multiple units).
Decoder Lock			
CV 15	0	All unlocked = 0	Decoder to unlock = 1 - 6 All locked = 7
CV 16	1	Mobile = 1 Sound = 2 Light Only = 3	4 5 6
To unlock a decoder, make CV 15 = 0 or CV 15 = CV 16. To lock a decoder, make CV 15 not equal to CV 16. To lock all same address decoders, make CV 15 = 7.			
Factory Reset			
CV 8	153	Enter 2 to perform a Factory Reset.	
Back EMF and Rule 17 Dimming Options			
Even number OR 0= BEMF OFF Odd number = BEMF ON			
BEMF disabled = 0		BEMF enabled = 1	
Turn on BEMF and button control of it make CV 61 = 3		BEMF button control= 3	
		Dims when stopped = 16	
		Opposite light dim = 32	
CV 61	1	BEMF and Dimming Control BEMF+Stopped + Opposite dim = 49	
CV 136	2	Function button control of BEMF Bits 0-7 designates buttons 5-12	
CV 64	15	Dimmed Brightness (2 - 6 for LEDs, 12 - 18 for Bulbs)	
CV 10	0	BEMF Cut Out	
RailCom®			
CV 178	0	CV address pointer	
CV 180	0	RailCom® Transmit Options	
CV 181	0	RailCom® Transmit Options	
CV 28	0	Broadcast enable	
For more information on decoder features or programming visit: www.tcsdcc.com and check out the Complete Programming Guide .			

MOTOR CONTROL

Speed Graph			
CV 2	0		Start Volts -- Set the voltage when the throttle is first applied.
CV 6	0		Mid Volts -- Set the voltage when the throttle is at midpoint.
CV 5	0		Top Volts -- Set the voltage when the throttle is at full speed.
Momentum			
CV 3	1		Acceleration -- Larger values add time to each speed step.
CV 4	1		Deceleration -- Larger values add time to each speed step.
CV 23	0		*Acceleration Adjustment when in Consist
CV 24	0		*Deceleration Adjustment when in Consist
*Values above 128 increase the adjustment * Values below 128 decrease the adjustment			
Motor Trim			
CV 66	0	Forward Trim	Values above 128 increase speed, values below 128 decrease speed.
CV 95	0	Reverse Trim	

LIGHTING CONTROL

Lighting Features							
Light Function Wires		Light Effect		fwd	rev	both	
CV 49	0	White Wire	FOF	Constant Bright Light	0	16	32
CV 50	16	Yellow Wire	FOR	Random Flicker (fire box) 1	1	17	33
CV 51	32	Green Wire	F1	Mars Light	2	18	34
				Flashing Light	3	19	35
				Single Pulse Strobe 1	4	20	36
				Double Pulse Strobe 1	5	21	37
				Rotary Beacon	6	22	38
				Gyra Light	7	23	39
				Rule 17 (dimnable light)	8	24	40
				Ditch Light (Left or Right)	10	26	42
				Ditch Light (Other side)	11	27	43
				Constant Dim 1	12	28	44
				*Auto-Mars	13	29	45
				Brake Light(s)	14	30	46
				Single Pulse Strobe 2	15	31	47
				Double Pulse Strobe 2	64	80	96
				Random Flicker 2	65	81	97
				Constant Dim 2	66	82	98
				Constant Dim 3	67	83	99
				Constant Dim 4	68	84	100
Rule 17 Dimming Control							
Rule 17 Dimming is turned on and off by button 4 as the default, but this value can be remapped via CV 123. See the Function Remapping guide on the literature section of www.tcsdcc.com for more info.							
Consist Lighting Control							
CV 21	0	Extra Functions	Green and Purple wire = 3				
CV 22	0	Headlight Functions	White and Yellow Wire = 3				
Lighting Quick Presets							
CV 8	10	Program a value of 10 to make violet and green ditch lights. Button 1 turns them on and Button two makes them blink.					
	11	Program a value of 11 for default trolley settings.					
	12	Program a value of 12 for standard trolley settings and tail lights.					
Note: For more information on Quick Presets visit the Comprehensive Programming Guide at www.tcsdcc.com							